
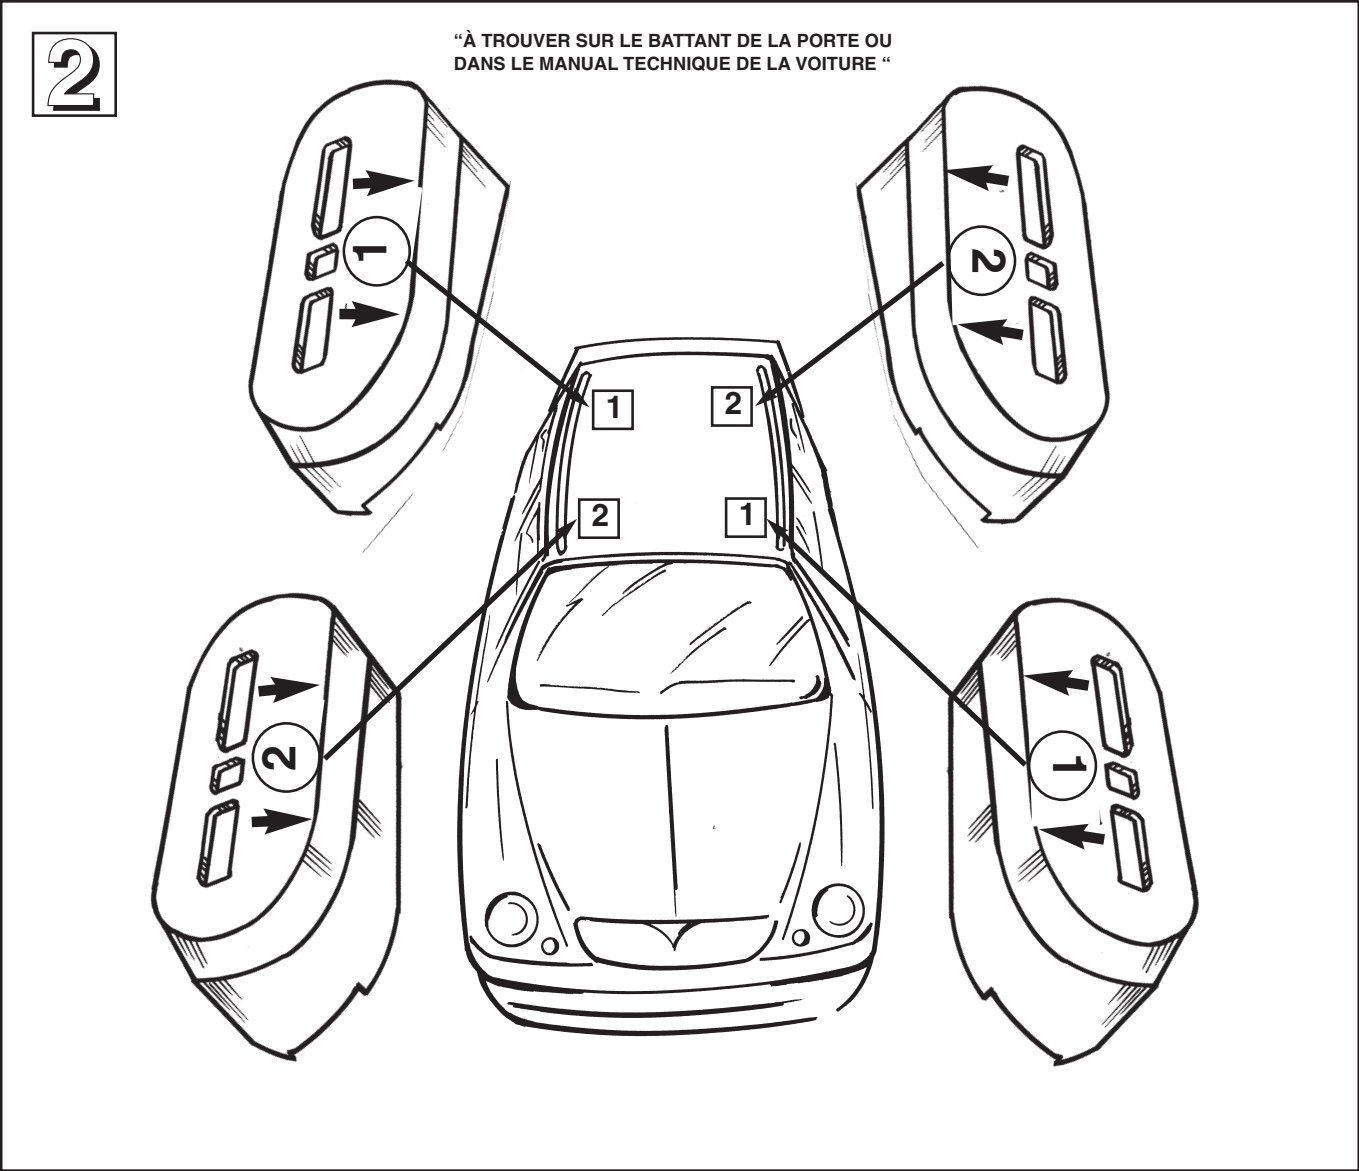


19601/1

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

CITROEN: C5 (->08) - PEUGEOT: 607

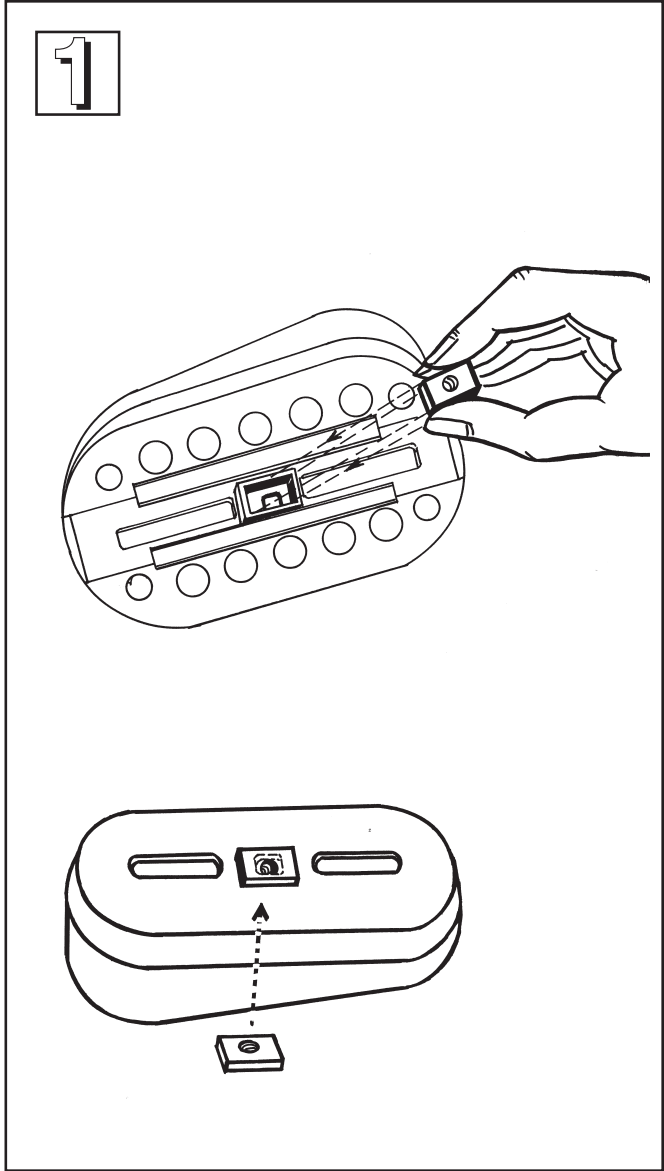

CITROEN: C5 (->08) - PEUGEOT: 607

3

TETTO VETTURE
 ROOF AUTO
 TOIT VOITURE
 DACH AUTOMOBILE
 AZOTEA AUTOMOVIL
 DACH AUTO

4

5 Nm

AVVITARE
 TO SCREW
 APRETAR
 FESTSCHRAUBEN
 VISSER
 VASTSCHROEVEN

5

ZOOM

5 Nm

AVVITARE
 TO SCREW
 APRETAR
 FESTSCHRAUBEN
 VISSER
 VASTSCHROEVEN

6

NO

OK

7

NO = **= NO**

OK = **= OK**

CENTRARE IL P. TUTTO SUL TETTO
 CENTRE THE UNIVERSAL BAR
 CARRIER ON THE ROOF
 CENTRAR EL PORTAEQUIPAJES
 SOBRE EL TECHO
 LASTENTRÄGER AUF DEM DACH
 ZENTRIEREN
 CENTRER LE PORTE-TOUT SUR LE TOIT
 PLAATS DE UNIVERSELE DRAGER
 IN HET MIDDEN VAN HET DAK

8

5 Nm


AVVITARE
 TO SCREW
 APRETAR
 FESTSCHRAUBEN
 VISSER
 VASTSCHROEVEN

19601/2

ISTRUZIONI DI MONTAGGIO - FITTING INSTRUCTIONS - INSTRUCCIONES PARA SU MONTAJE - MONTAGEANWEISUNGEN - INSTRUCTIONS DE MONTAGE - MONTAGE INSTRUCTIES.

PEUGEOT: 307

1

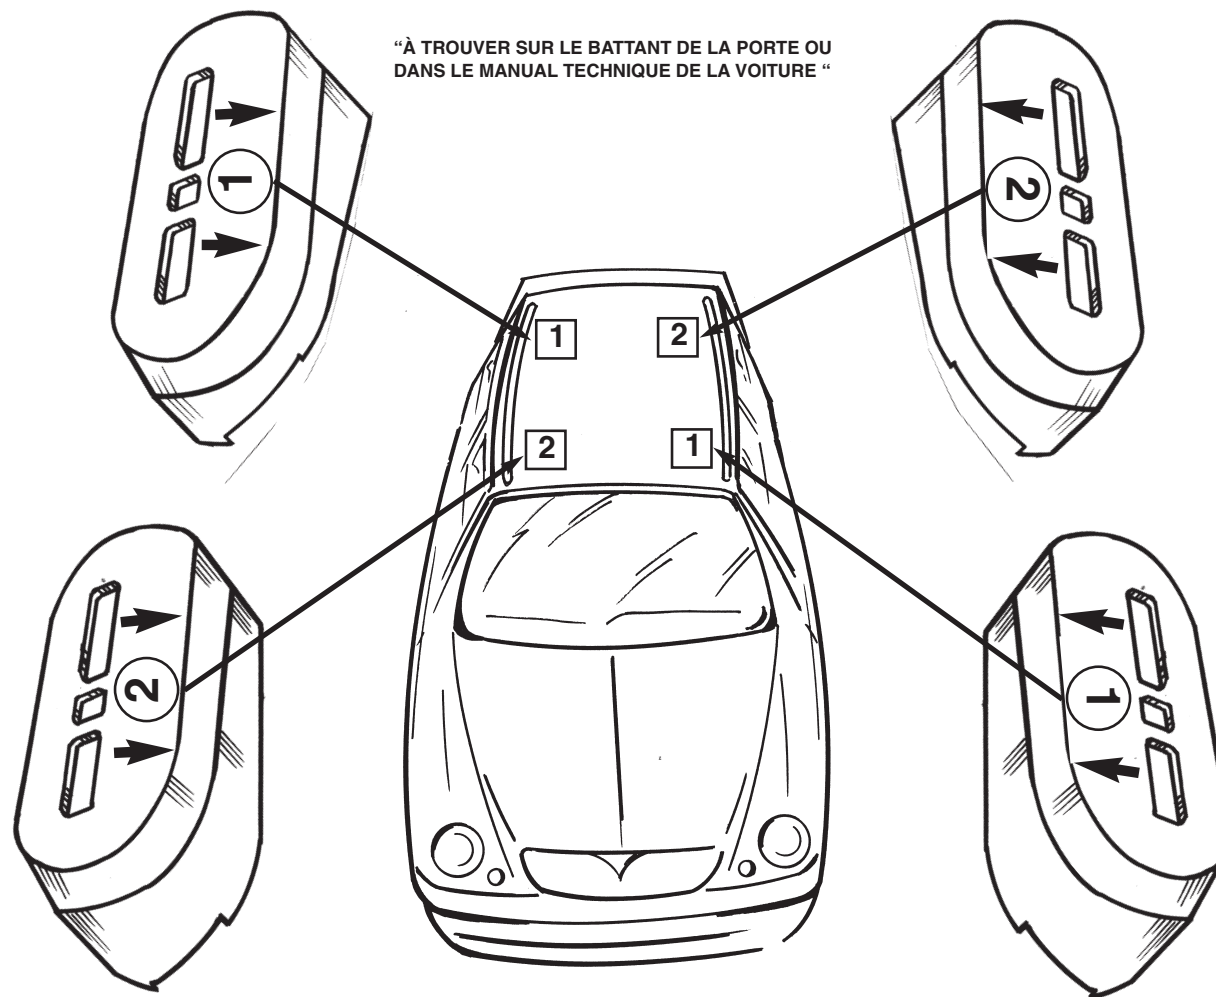

PEUGEOT: 307

